



Please Note that cable lifting method before 1997 was different than above. Please contact dealer for correct cables and parts.

READ MANUAL BEFORE USING HOIST.
Note bolt thread area should be on outside of hoist

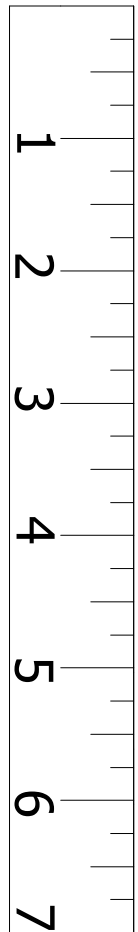

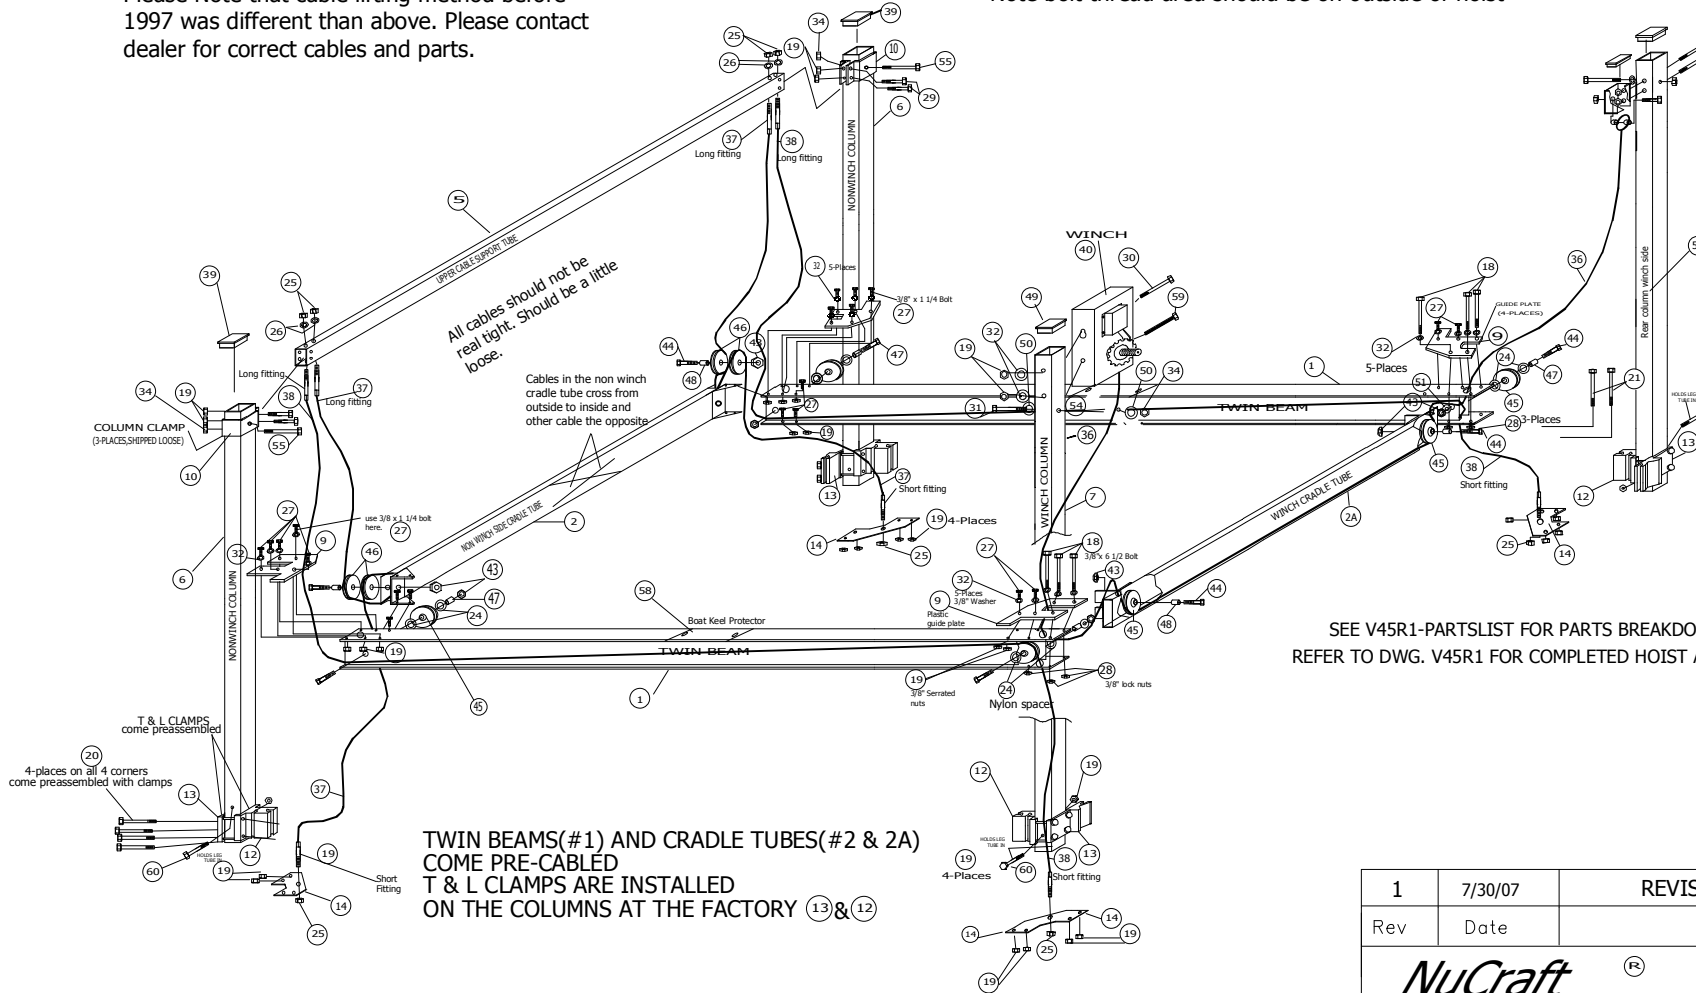

Use ruler to measure nuts and bolts

SEE V45R1-PARTSLIST FOR PARTS BREAKDOWN
REFER TO DWG. V45R1 FOR COMPLETED HOIST ASSEMBLY

Inner Frame Assembly

Manual, parts list and drawing on the web WWW.CRAFTLANDER.COM

Rev	Date	Description	
1	7/30/07	REVISED DWG NUMBER	FS
			Int
		 	
		402 Southline Rd. Roscommon, MI 48653	
Scale: None	Approved by:		Drawn by: RLW
Date: 7/28/06			Revised by: rLW
Assembly & Part locations for V45108, V45114 and V45120			Drawing Number V45R1-2