


READ MANUAL BEFORE USING HOIST.

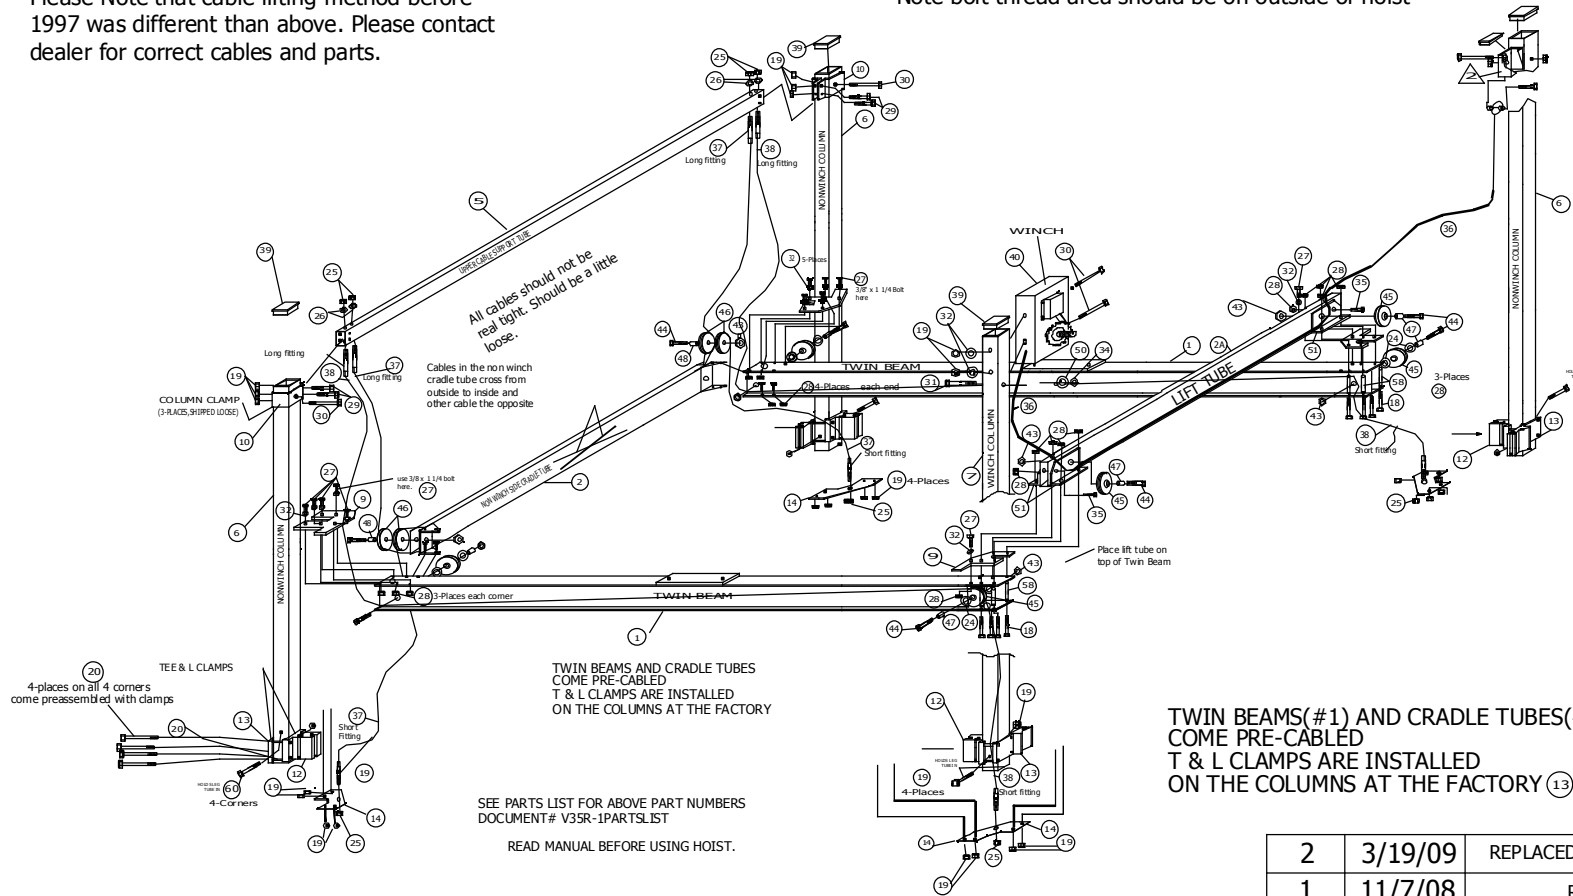

Please Note that cable lifting method before 1997 was different than above. Please contact dealer for correct cables and parts.

Note bolt thread area should be on outside of hoist



Use ruler to measure nuts and bolts

TWIN BEAMS (#1) AND CRADLE TUBES(#2 & 2A) COME PRE-CABLED T & L CLAMPS ARE INSTALLED ON THE COLUMNS AT THE FACTORY (13)&(12)

2	3/19/09	REPLACED BOLTED PART W/WELDED	FS
1	11/7/08	REVISED DWG NO.	FS
Rev	Date	Description	Int
			
		402 Southline Rd. Roscommon, MI 48653	
Scale: None	Approved by:	Drawn by: RLW	
Date: 3/21/07		Revised by: rLW	
Assembly & Part locations for V35108 & V35120			Drawing Number V35R1-2

Inner Frame Assembly