


Note bolt thread area should be on outside of hoist

If this print has colored cables they are for easier understanding of how they are strung.
Cables from the factory are colored too. They won't all match to below colors.

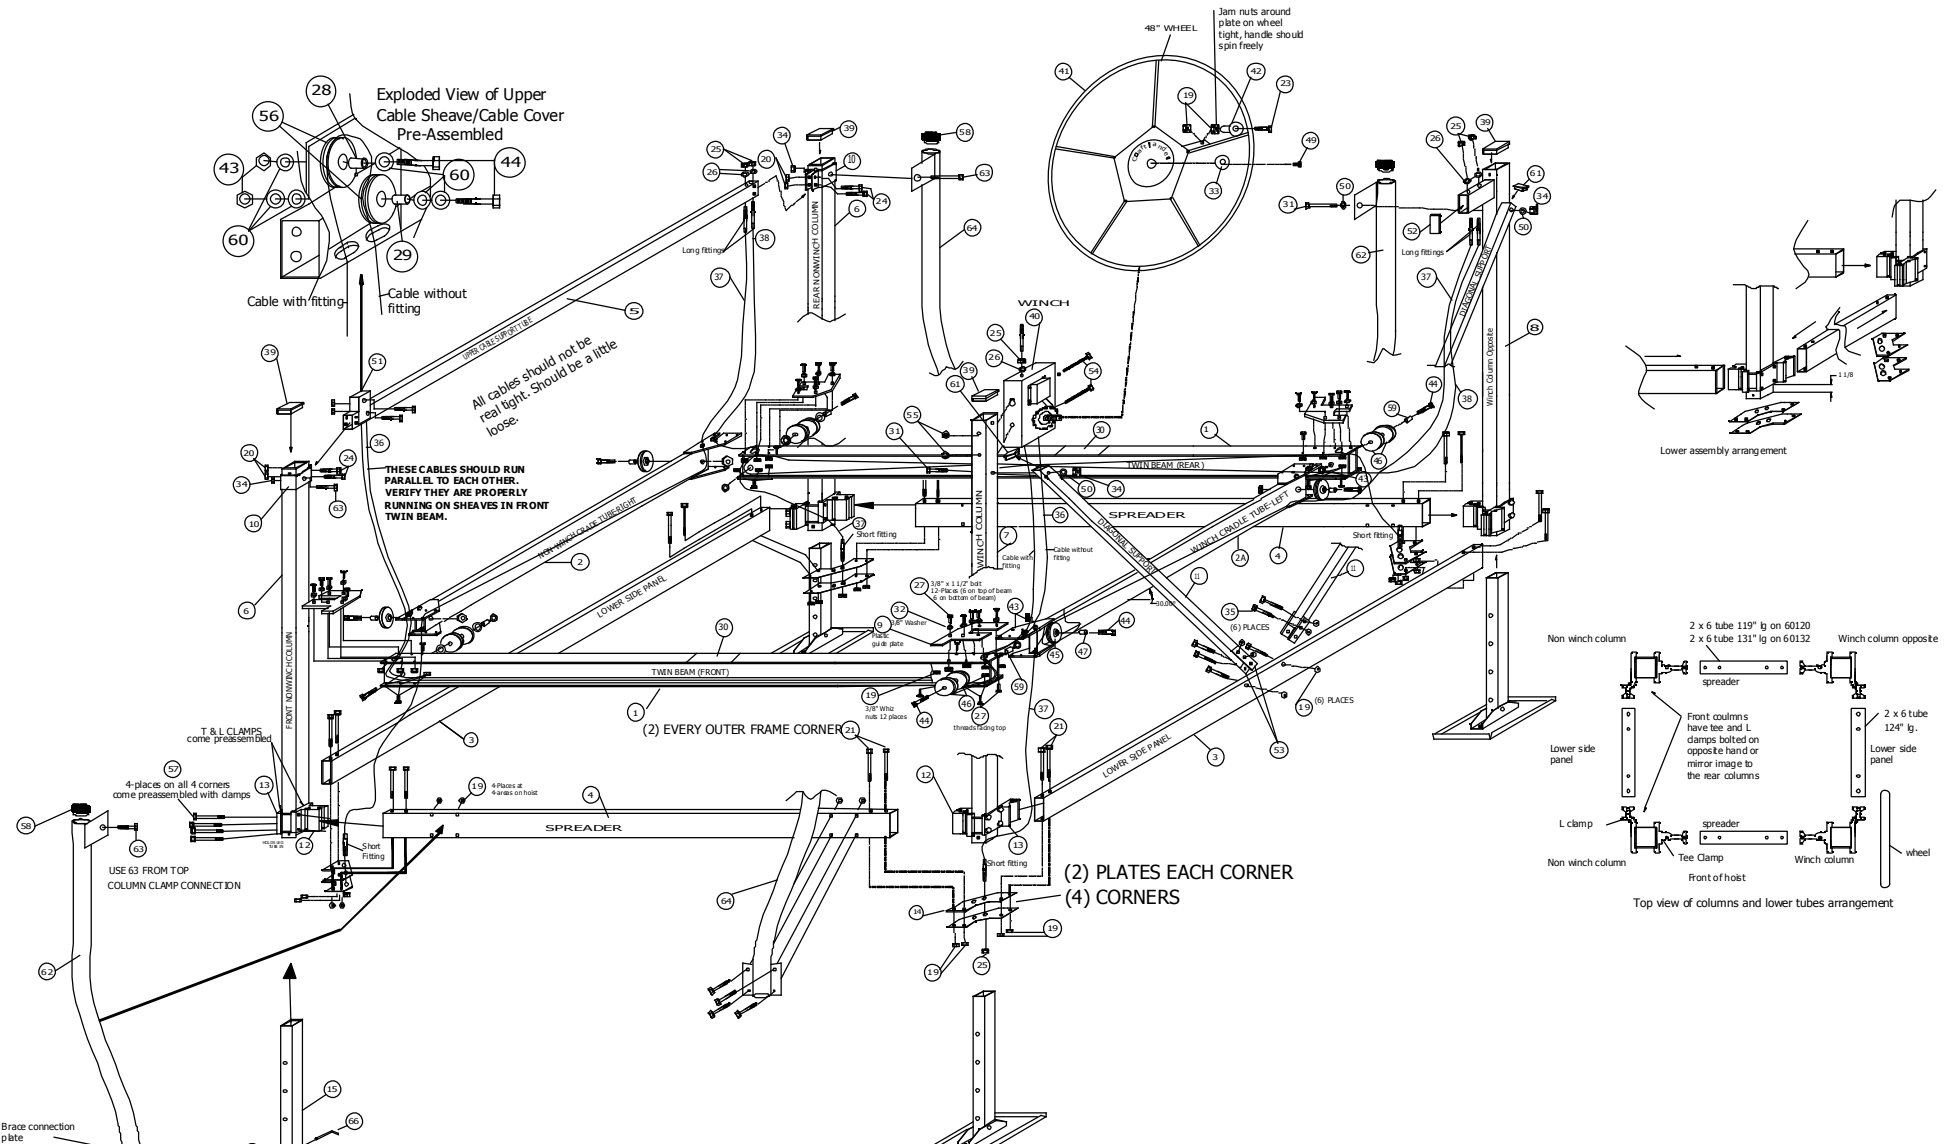

**TWIN BEAMS(#1) AND CRADLE TUBES(#2 & 2A) COME PRE-CABLED
T & L CLAMPS ARE INSTALLED (12 & 13) ON THE COLUMNS AT THE FACTORY**

SEE PARTS LIST FOR ABOVE PART NUMBERS
DOCUMENT # A-MH-V80R1SPARTSLIST

READ MANUAL BEFORE USING HOIST.
Manual, parts list and drawing on the web WWW.CRAFTLANDER.COM

NOTE: WHEN ORDERING REPLACEMENT PARTS A SERIAL NUMBER WILL BE REQUIRED TO ENSURE RECEIPT OF CORRECT ITEMS

Rev	Date	Description	Int
<p>NuCraft [®] Metal Products</p>		<p>402 Southline Rd. Roscommon, MI 48653</p>	<p>CRAFTLANDER [®]</p>
Scale: None		Approved by:	Drawn by: FS
Date: 1/7/14			
Assembly and part locations for MH-V80120			Drawing Number A-MH-V80R-15