


Note bolt thread area should be on outside of hoist
 If this print has colored cables they are for easier understanding of how they are strung.
 Cables from the factory are colored too. They won't all match to below colors.

Spacer, washer & 5/16" bolt supplied in winch
 box **DO NOT USE SPRING IN BOX!**

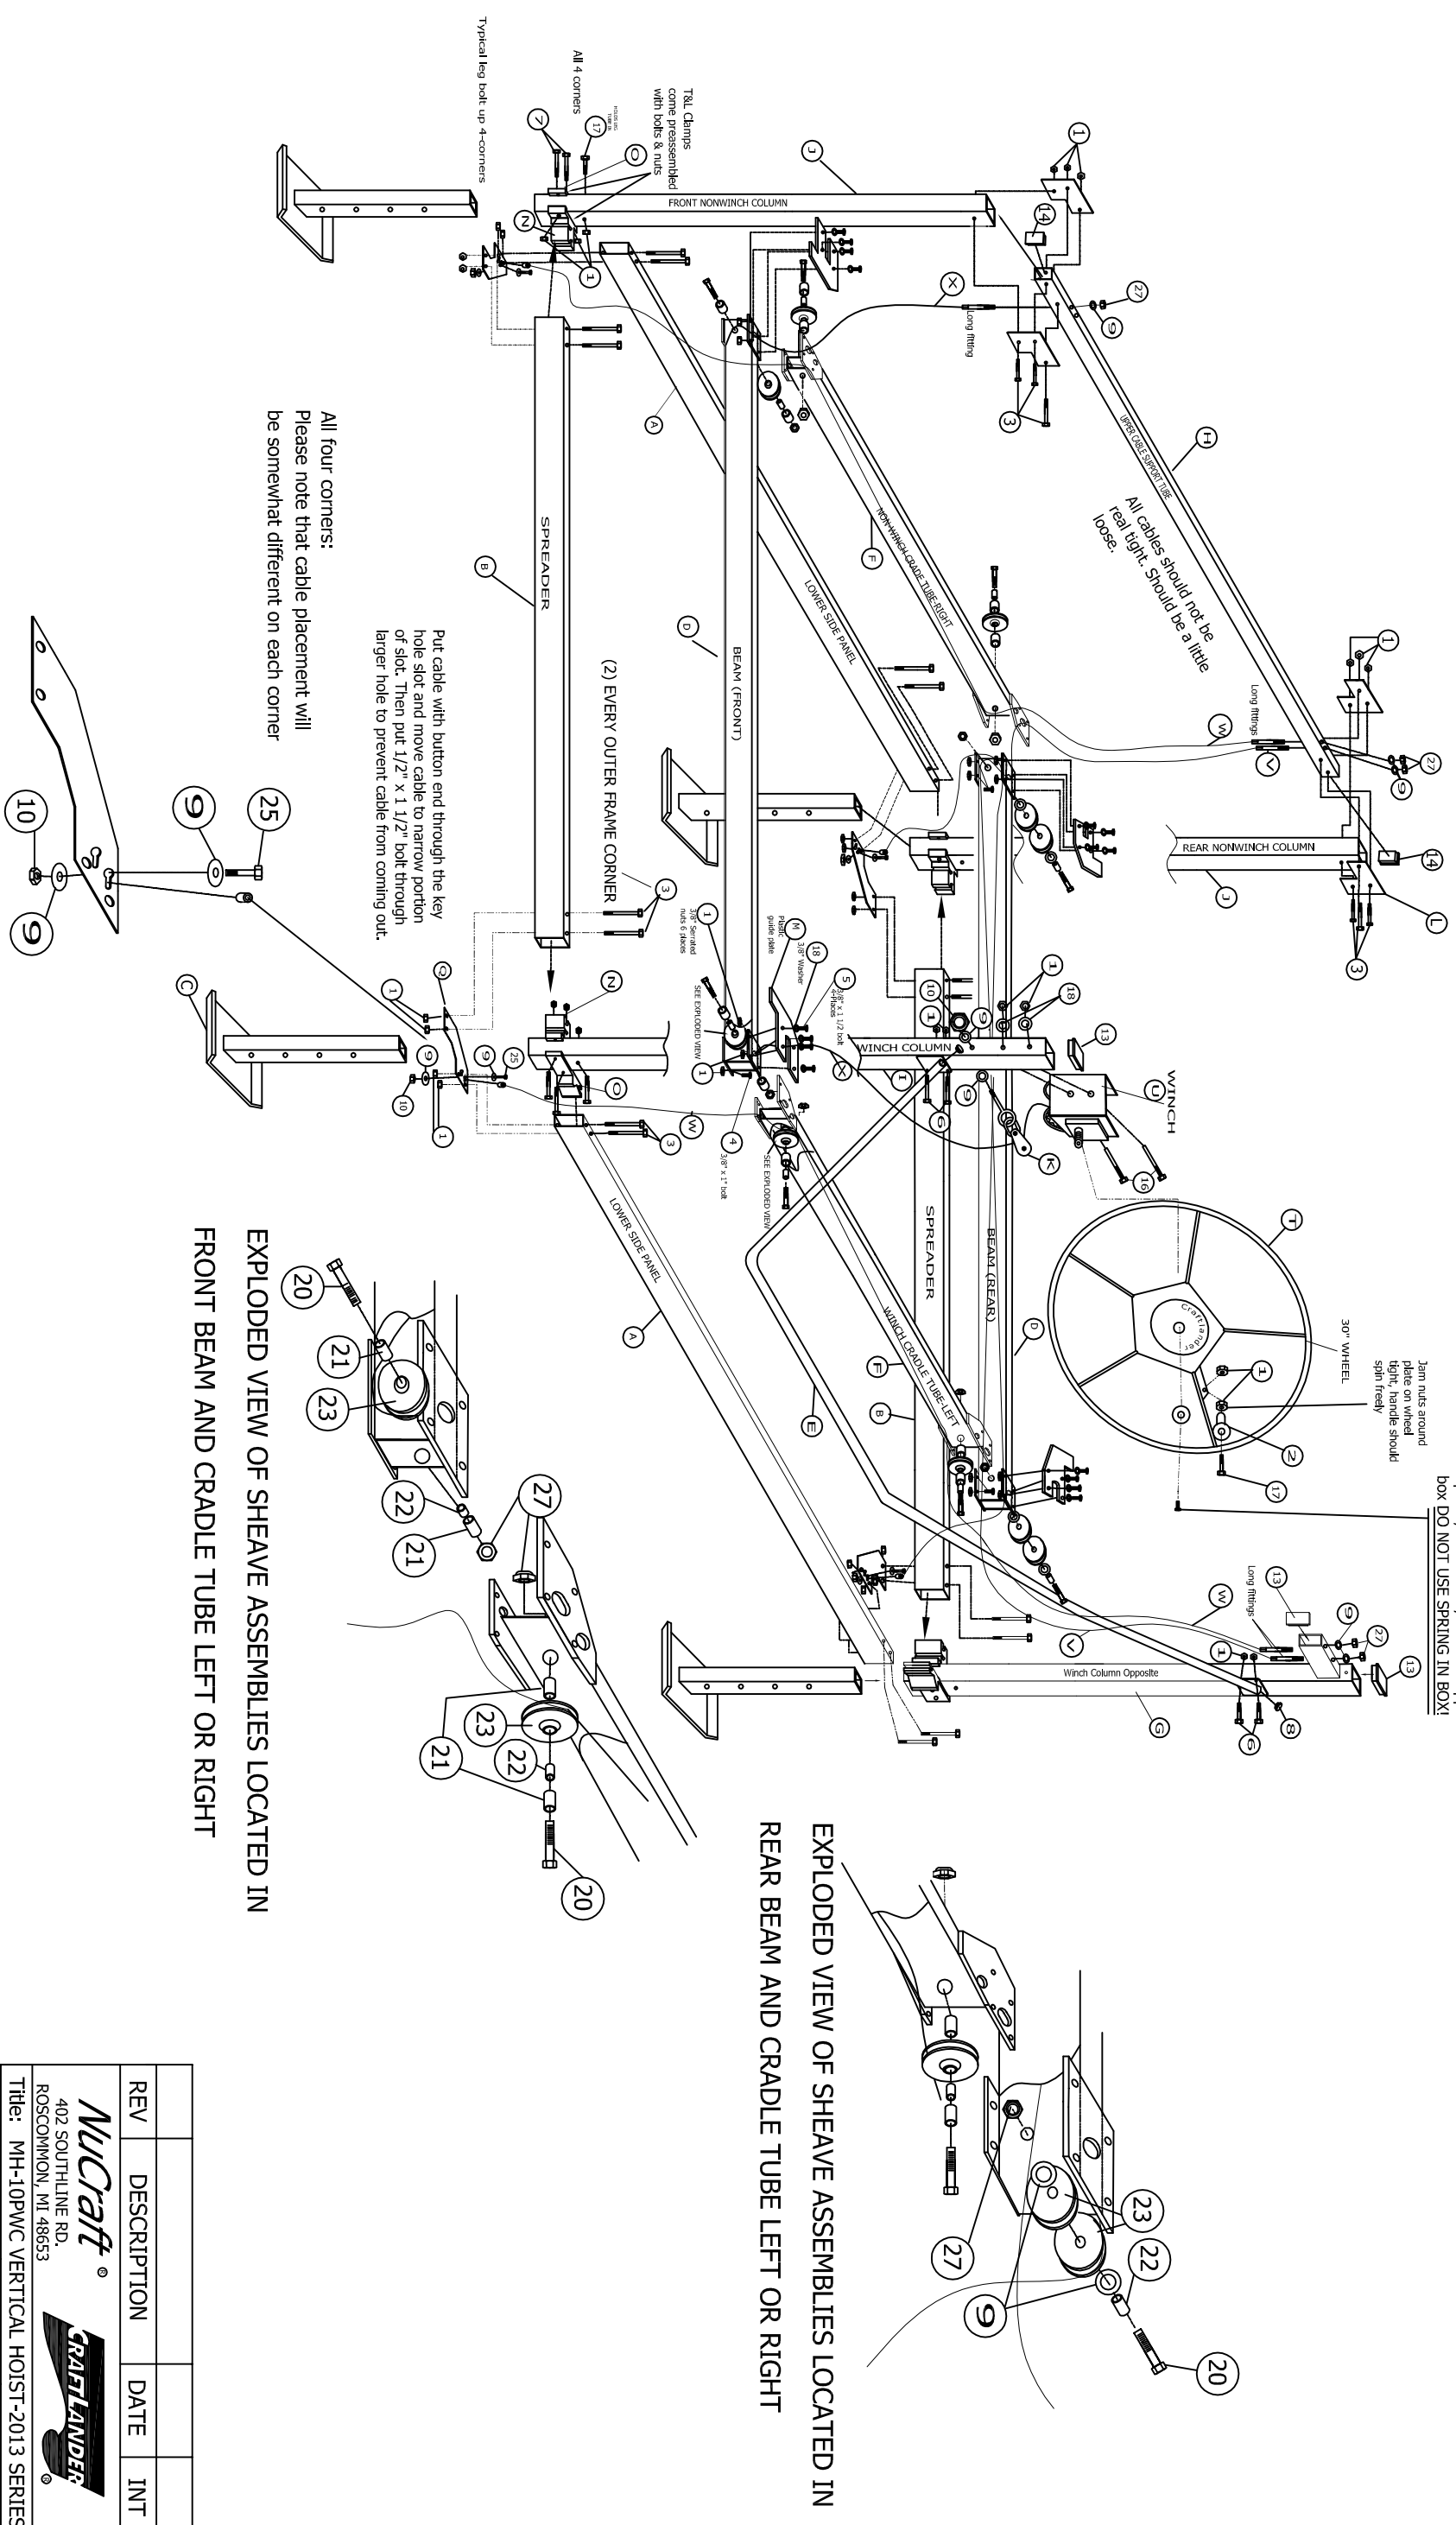

All four corners:
 Please note that cable placement will
 be somewhat different on each corner

Put cable with button end through the key
 hole slot and move cable to narrow portion
 of slot. Then put 1/2" x 1 1/2" bolt through
 larger hole to prevent cable from coming out.

**EXPLODED VIEW OF SHEAVE ASSEMBLIES LOCATED IN
 FRONT BEAM AND CRADLE TUBE LEFT OR RIGHT**

**EXPLODED VIEW OF SHEAVE ASSEMBLIES LOCATED IN
 REAR BEAM AND CRADLE TUBE LEFT OR RIGHT**

REV	DESCRIPTION	DATE	INT

NuCraft
 402 SOUTHLINE RD.
 ROSCOMMON, MI 48653

CRAFTLANDER

Title: MH-10PWC VERTICAL HOIST-2013 SERIES
 DRAWING NO. SCALE DATE 1/17/13
 A-MH-10PWC-13 NONE DRAWN BY FFS